

LEAK ALARM & SHUT-OFF SYSTEM

AQUAGATE CX - WHOLE HOUSE



P/N
19-CX



Desc
1\"/>

LEAK CONTROLLER

Leak Controller
with sensor



P/N
14-LCS1/4
14-LCS3/8

Desc
1/4\"/>

SUPPLY ADAPTER - SLIP JOINT

1/2\"/>



05-92S8CH



05-92S4CHL

P/N	Desc
05-92S8BR	1/8\"/>
05-92S8CH	1/8\"/>
05-92S4	1/4\"/>
05-92S4CHL	1/4\"/>

1/2\"/>



P/N	Desc
05-92S1/8	1/8\"/>
05-92S1/4	1/4\"/>

WASHERS for SJ ADAPTERS



P/N	Desc
05-5967	Cone Washer
05-9W	Flat Washer

SUPPLY ADAPTER - COMPRESSION

3/8\"/>



05-91-4
05-91-6



05-91-4F



05-92C6-2
05-92C6-4

P/N	Desc
05-91-4	1/4\"/>
05-91-6	3/8\"/>
05-91-4F	1/4\"/>
05-92C6-2	1/8\"/>
05-92C6-4	1/4\"/>
05-92C6W	Washer for 05-92C6-x

1/2\"/>

P/N	Desc
05-91-8-4	1/4\"/>
05-91-8-6	3/8\"/>



SUPPLY ADAPTER - PIPE THREAD

Brass



P/N	Desc
05-92C8	1/2\"/>
05-93C8	3/4\"/>
05-94C8	3/4\"/>
05-92-8-4	3/4\"/>
05-92-8-6	3/4\"/>
05-92C6W	WASHERS for 05-92 Series

SUPPLY ADAPTER - HOSE



P/N	Desc
05-95-4	FHT x 1/4\"/>
05-95-4L	FHT x 1/4\"/>
50-NC2098	FHT x 1/4\"/>

DRAIN SADDLES



05-834
05-836



05-834J
05-836J



05-834JG
05-836JG



05-850



05-820
05-824

P/N	Desc
05-834	1/4" FIP
05-836	3/8" FIP
05-834J	1/4" Jaco
05-836J	3/8" Jaco
05-834JG	1/4" John Guest
05-836JG	3/8" John Guest
05-850	1/4" Compression
05-820	1/2" FIP - for 1 1/2" Tube
05-824	1/2" FIP - for 1 1/2" Pipe

EZ SUPPLY ADAPTER KITS - 1/2" S.J.

CHROME ADAPT w/ 1/4"QC CHROME BALL VALVE



P/N	Desc
05-92S4CHGZ	1/2"MSJ x 1/2"FSJ x 1/4"QC

CHROME ADAPT w/ 1/4"C CHROME BALL VALVE



P/N	Desc
05-92S8CHKZ	1/2"MSJ x 1/2"FSJ x 1/4"C

CHROME ADAPT w/ 1/4"C CHROME NEEDLE VALVE



P/N	Desc
05-92S8CHNZ	1/2"MSJ x 1/2"FSJ x 1/4"C

BRASS ADAPT w/ 1/4"C CHROME BALL VALVE



P/N	Desc
05-92S8BKZ	1/2"MSJ x 1/2"FSJ x 1/4"C

EZ SUPPLY ADAPTER KITS - 1/2" S.J.

BRASS ADAPT w/ 1/4"C BRASS NEEDLE VALVE

P/N	Desc
05-92S8KZ	1/2"MSJ x 1/2"FSJ x 1/4"C



BRASS ADAPT w/ 1/4"FIP BRASS BALL VALVE

P/N	Desc
05-92S4BKZ	1/2"MSJ x 1/2"FSJ x 1/4"FIP



BRASS ADAPT w/ 1/4" JOHN GUEST ADAPTER

P/N	Desc
05-92S4GZ	1/2"MSJ x 1/2"FSJ x 1/4"JG



BRASS ADAPT w/ 3/8"C BRASS NEEDLE VALVE

P/N	Desc
05-92S4KZ	1/2"MSJ x 1/2"FSJ x 3/8"C



PLASTIC JOHN GUEST ADAPTER

P/N	Desc
16-EZKIT1/4	1/2"MSJ x 1/2"FSJ x 1/4"JG
16-EZKIT3/8	1/2"MSJ x 1/2"FSJ x 3/8"JG



EZ SUPPLY ADAPTER KITS - 3/8"C

BRASS ADAPT w/ 1/4"FIP BRASS BALL VALVE

P/N	Desc
05-91-4FBKZ	3/8"FC x 3/8"MC x 1/4"FIP



BRASS ADAPT w/ 1/4" JOHN GUEST ADAPTER

P/N	Desc
05-91-4FGZ	3/8"FC x 3/8"MC x 1/4"JG



JOHN GUEST ADAPT w/ JG VALVE

P/N	Desc
17-BJ4G6M6F	3/8"FC x 3/8"MC x 1/4"JG
17-BJ6G6F6M	3/8"FC x 3/8"MC x 3/8"JG



SUPPLY ADAPTERS - PIPE

For 1/2" - 3/4" Pipe



P/N	Desc
05-809G	w/ 1/4" QC Needle Valve
05-809	w/ 1/4"C Needle Valve
05-800LL	w/ 1/4"C Needle Valve
05-810	w/ 1/4"C Needle Valve
05-808	Body Only
05-808-BVZ	w/ 1/4"C Ball Valve

HOSE CLAMPS - (mini) WORM GEAR

SS Band & Housing - Plated Screw add "SS" to PN
for all Stainless Steel EXAMPLE: 50-9M6SS

P/N	MIN DIA	MAX DIA
50-9M5	1/4"	11/16"
50-9M6	5/16"	7/8"
50-9M8	3/8"	1"
50-9M9	1/2"	1 1/8"

HOSE CLAMPS - WORM GEAR

SS Band & Housing - Plated Screw add "SS" to PN
for all Stainless Steel EXAMPLE: 50-920SS

P/N	MIN DIA	MAX DIA
50-906	3/8"	7/8"
50-908	7/16"	1"
50-910	1/2"	1 1/16"
50-912	1/2"	1 1/4"
50-916	11/16"	1 1/2"
50-920	3/4"	1 3/4"
50-924	1"	2"
50-928	1 1/4"	2 1/4"
50-932	1 1/2"	2 1/2"
50-936	1 3/4"	2 3/4"
50-940	2"	3"
50-944	2 1/4"	3 1/4"
50-948	2 1/2"	3 1/2"
50-952	2 3/4"	3 3/4"
50-956	3"	4"
50-964	2 1/2"	4 1/2"
50-972	3"	5"
50-980	3 1/2"	5 1/2"
50-988	4"	6"
50-996	4 1/2"	6 1/2"

HOSE CAP

BRASS



P/N	Desc
50-4001	Hose Cap w/ 1/8"FIP Tap
50-4002	Hose Cap w/ 1/4"FIP Tap
50-4000	Hose Cap w/ Washer

HOSE TO PIPE ADAPTER

SOLID BRASS



P/N	Desc
50-4401	3/4"F Hose to 1/2"MIP
50-4402	3/4"F Hose to 3/4"MIP
50-5002	3/4"F Hose to 1/2"MIP, Swivel
50-5101	3/4"F Hose to 1/2"FIP, Swivel
50-5102	3/4"F Hose to 3/4"FIP, Swivel
50-4102	3/4"M Hose to 1/2"MIP
50-4103	3/4"M Hose to 3/4"MIP
50-4201	3/4"M Hose to 1/4"FIP
50-4202	3/4"M Hose to 3/8"FIP
50-4203	3/4"M Hose to 1/2"FIP
50-4204	3/4"M Hose to 3/4"FIP